

MODERN  FLAMES

# Sunset Charred Oak

SCO-26EL / SCO-20EL




**INSTALLATION/OWNERS MANUAL**  
FOR USE IN UNITED STATES AND CANADA

# USER INSTRUCTIONS


## POWER DATA

	SCO-26EL	SCO-20EL
Transformer	AC 120V/60Hz input 12V DC output	AC 120V/60Hz input 12V DC output
Lamps	LED 12V	LED 12V
Rotor Motor	12V 15 r/min	12V 15 r/min
Shipping Size	30" x 16.5" x 15"	23" x 13" x 15"
Shipping Weight	35lbs	26lbs

## PRODUCT DIMENSIONS

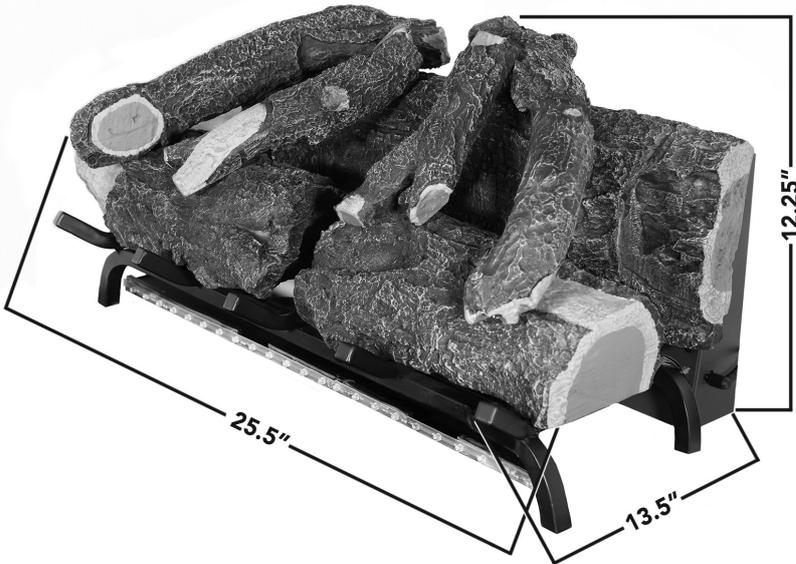

SCO-26EL  
25 1/2" W x 12 1/4" H x 13 1/2" D

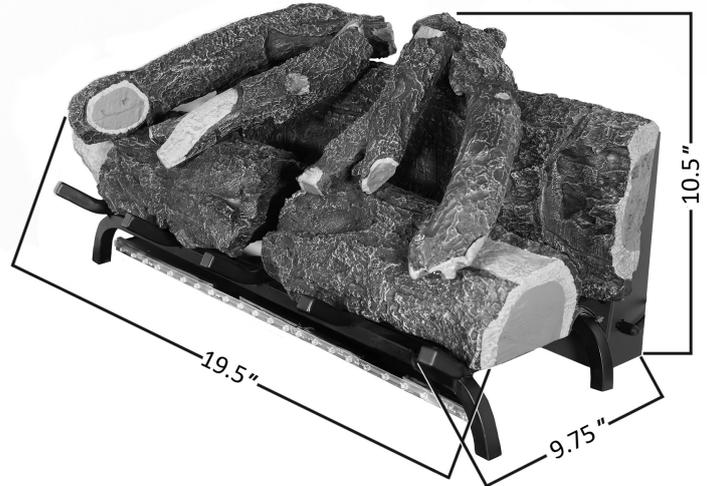

SCO-20EL  
19 1/2" W x 9 3/4" H x 10 1/2" D

## BOX CONTENTS



Log Set with  
Base



Glass Media



Power Supply



Ember Bed  
Light Strip  
and L metal  
bracket




Remote

# INSTALLATION

## INSTALLATION

This log set is designed to fit into existing fireplaces as an insert to replace a wood or gas burning fire. This log set can also be used in cabinets or recessed wall openings.

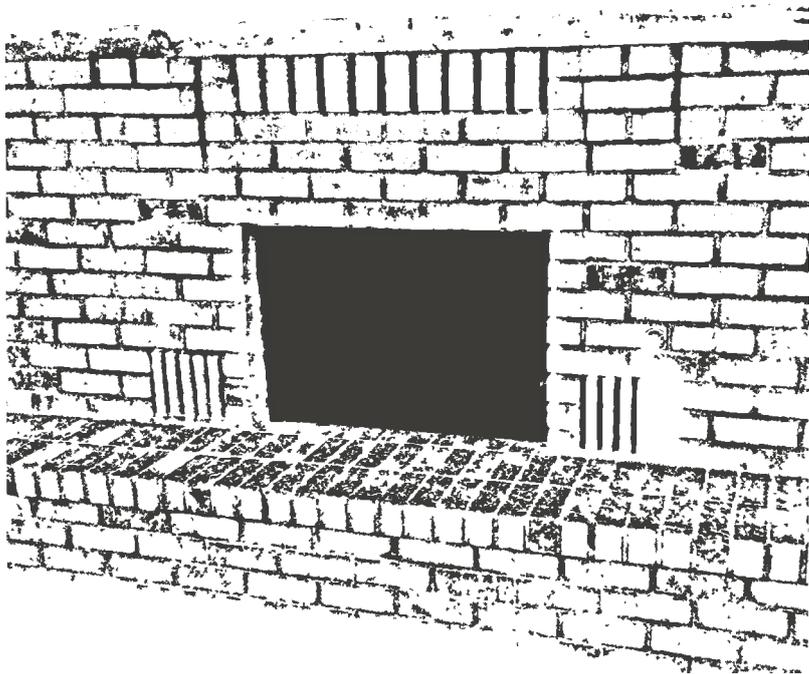


1. Make sure the fireplace is clean and free of debris.

2. Simply place the log set in to your existing fireplace.
3. Optionally, place the Ember Bed Light Strip below the log set with the LEDs facing out. Plug in the Ember Bed Light Strip into the connector on the bottom right side of the log set.



4. Use the glass media to cover the Ember Bed Light Strip and plug in the logset.

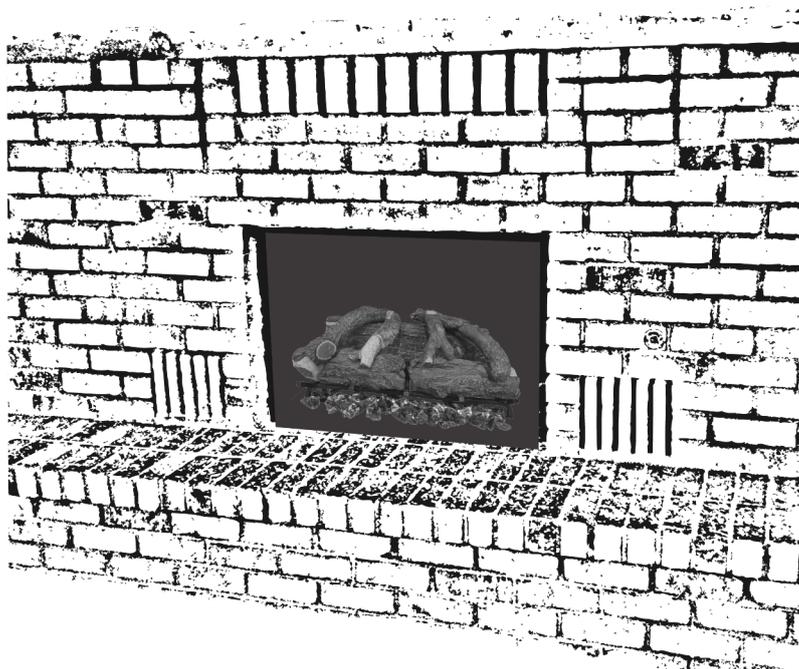

## OPERATION

On the front face of the log set, near the bottom right side is the main power button. Push this button to begin using the fireplace. On the bottom of the log set are two push buttons that control the flame pattern and the brightness of the log set.



Power button



Dimmer

Flame

### Touch Controls

To begin operation press the Power button. The log set will light up with the last settings used.

Pressing the Dimmer button will cycle the brightness of the log set and ember bed. There are 3 levels of brightness to choose from.

Pressing the Flame button will cycle the flame pattern of the log set. There are 5 different flame patterns to choose from.

### Remote Controls

All buttons on the remote function in the same manner as the buttons on the log set.


To begin operation press the Power button. The log set will light up with the last settings used.

Pressing the Dimmer button will cycle the brightness of the log set and ember bed. There are 3 levels of brightness to choose from.

Pressing the Flame button will cycle the flame pattern of the log set. There are 5 different flame patterns to choose from.




## WIFI SETUP


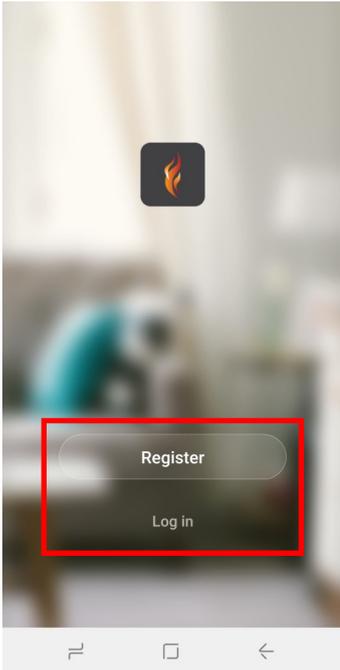


1. Get started by downloading the Modern Flames app from the Apple App Store or the Google Play Store. New users will need to register. Existing users can log in.

2. Enter your login information and click Log in.

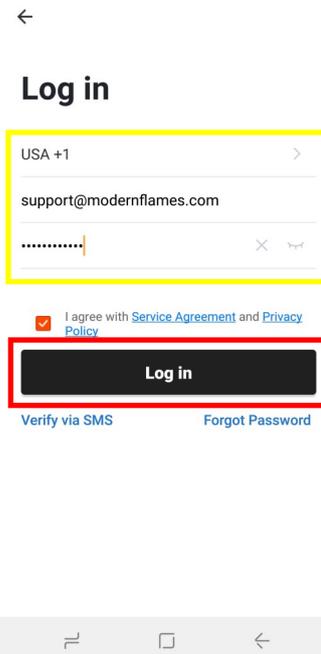


3. Upon your first log in you will need to add your home.

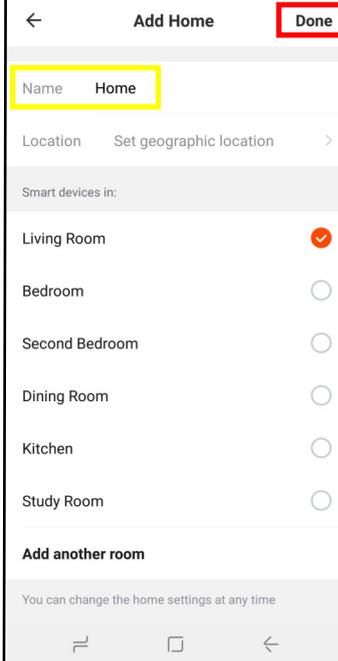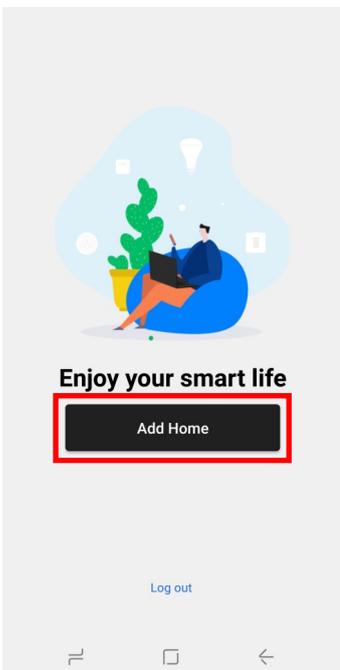


4. Add a name for the home and the room which the fireplace is located. Click done.


5. Once your home is added, click add device

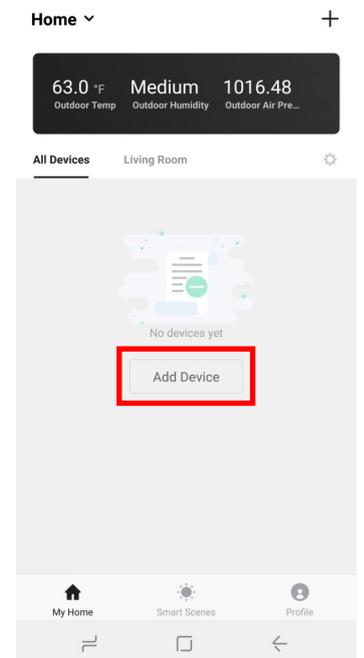


6. On the fireplace, hold the power button until the logset blinks rapidly (about 5 seconds). Note: In some instances the fireplace is rapidly flashing as soon as plugged in.

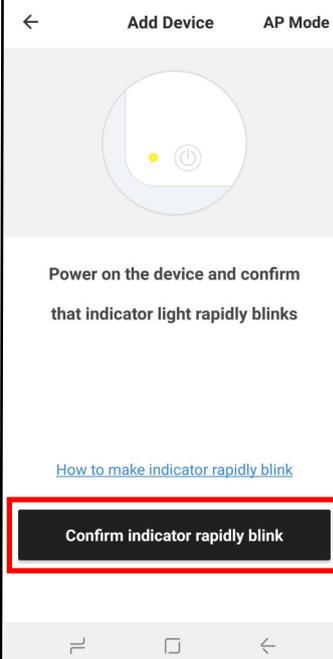

# OPERATION

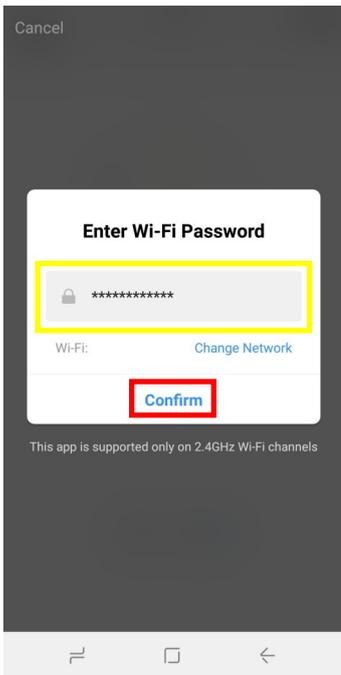


7. Enter your wi-fi password and click confirm.


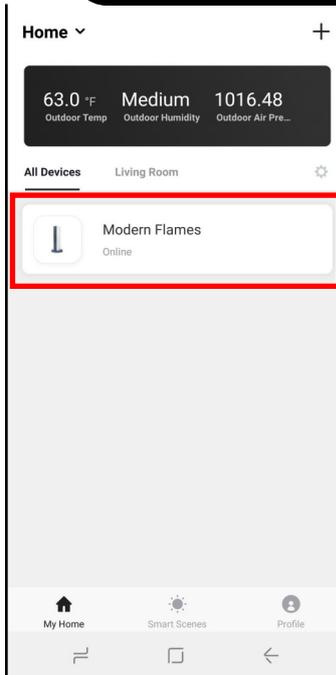


10. The fireplace will be added to your home. Click on the logset to enter the command menu.

8. The app will connect the fireplace to your wi-fi network.

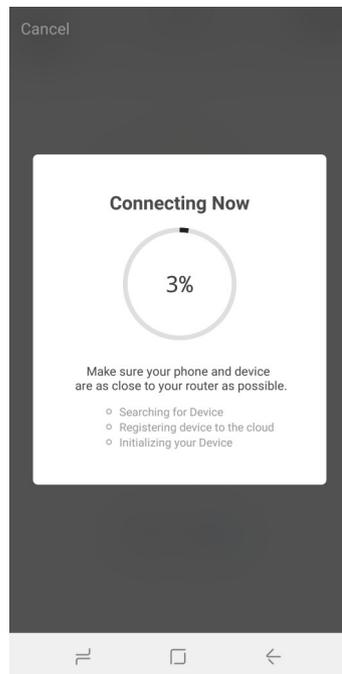

11. From this screen you can control your logset.

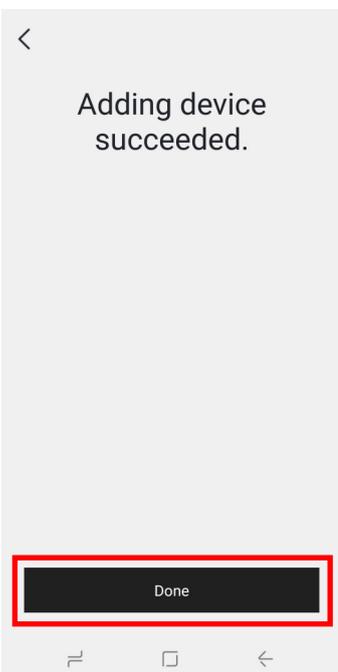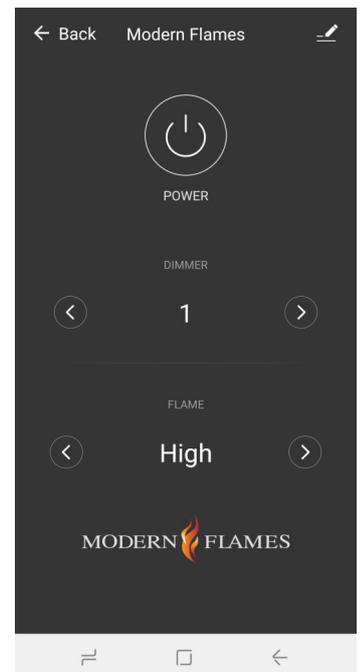

9. Once the device is added, click done.

## MAINTENANCE

If you are not going to be using wi-fi, it is recommended to disconnect the wi-fi board. Please follow the steps below.

1. Turn logset off and disconnect from power.
2. Turn logset around.
3. Locate wi-fi board on left side of the rear of the insert.
4. Disconnect the wiring harness from the wi-fi board (shown in red)
5. Wi-fi is now disconnected.

Your Wi-Fi may have come already disconnected or you now want to use the wi-fi. Please follow these steps below for connecting.

1. Turn logset off and disconnect from power
2. Turn log set around
3. Locate wi-fi board on left side of rear of the insert
4. Connect the wiring harness to the wi-fi board (shown in red)
5. Wi-fi is now connected



## FREQUENTLY ASKED QUESTIONS

Q. How do you program the remote control?

A. The remote comes pre-programmed. No programming is necessary.

Q. What distance can the remote be used from the log set?

A. Optimal distance for the remote control is within 15 feet. Sensor located on the right side of logset

Q. Can you turn on the log set via the control buttons and off via the remote (or vice versa)?

A. Yes.

Q. How often do the batteries in the remote need to be replaced?

A. Annually, possibly more with heavy use.

Q. Is there a remote receiver in the log set that requires batteries?

A. No, only the actual remote requires batteries. The rest of the log set runs entirely off of the main power supply.

Q. Fireplace flashes when I turn off the power.

A. When synced with wi-fi this will stop. If not using wi-fi, follow the steps above to disconnect the wi-fi board.

## CLEANING AND MAINTENANCE INSTRUCTIONS

There is very little maintenance involved with your electric fireplace. Please follow the few points below:

- On a semi-annual basis unplug the log set from its power source and dust with a dry cloth. Be careful not to brush any wires that may be exposed as you do this.

## TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Can operate log set functions with mechanical controls but not remote control	A. Low Batteries	A. Replace batteries in remote control with - 2 AAA batteries
	B. Not aiming control correctly	B. Aim remote control to the right middle of the log set where the sensor is located
	C. Remote control defective	C. Replace remote control
	D. Remote Sensor is defective	D. Replace remote sensor inside log set
Nothing comes on	A. Log set is not plugged in to an electrical outlet	A. Check plug
	B. Breaker tripped or outlet has no power	B. Reset breaker, test outlet for power
	C. Defective component	C. Replace motherboard or transformer
Log set lights up but there is no flame image	A. Wiring for motor is loose	A. Disconnect unit from power source and inspect for loose connections from motor
	B. Motor is defective	B. Replace motor
	C. Spindle rod is loose or disconnected	C. Check connection between spindle motor and spindle rod
Log set is squeaking when flame image is on	A. Log set spindle/rod is contacting to metal	A. Apply lithium grease or any standard grease to contacts with rod and metal
	B. Motor is defective	B. Replace motor







© 2018

MODERN  FLAMES

[www.modernflames.com](http://www.modernflames.com)  
Please dispose of properly.

