


Assembly Instructions Log Holder

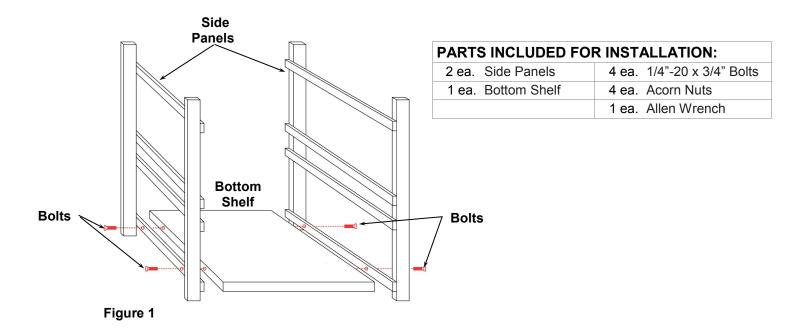

Step 1. Layout and identify all parts. Verify that all parts are included.
 NOTE: If parts are missing contact Stoll Customer Service for replacement parts.

Step 2. Lay one Side Panel on its side and place the Bottom Shelf next to the bottom crossbar.

NOTE: The crossbar must be on the same side of the Side Panel as the Bottom Shelf.

- Align the holes in the bottom crossbar of the Side Panel with holes in the side of the Bottom Panel. NOTE: The flanges on Bottom Shelf face down with the finished smooth side facing up.
- Insert two (2) bolts through holes in the Side Panel into Bottom Panel and finger-tighten acorn nuts onto bolts.
- **Step 3.** Repeat Step 2 to attach the other Side Panel to the Bottom Shelf.
- Step 4. Tighten all four (4) bolts snugly using the Allen wrench supplied. Be careful to not over-tighten.
 NOTE: If the Log Holder does not stand squarely on all four legs loosen the nuts and settle the Log Holder on all four legs. Retighten the bolts snugly using the Allen wrench.



This product can expose you to chemicals including Carbon Black, which is known to the State of California to cause cancer.

For more information go to www.P65Warnings.ca.gov